

INSTALLATION INSTRUCTIONS

- PondAir 2 -
Replacement Diaphragm Kit
(Item #120920)
- PondAir 4 -
Replacement Diaphragm Kit
(Item #120921)


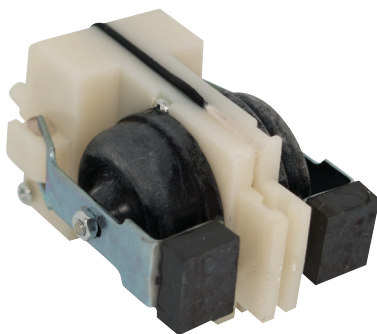


Table of Contents:

Product Contents	2	Installation Instructions	2-4
Important Information	2	Maintenance	4

PRODUCT CONTENTS

PondAir 2 - (1)
PondAir 4 - (2)

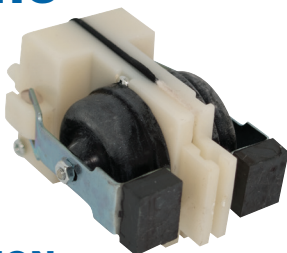

IMPORTANT INFORMATION

Please read these instructions thoroughly before use. Failure to follow instructions may result in equipment damage or failure, losses, injury or death.

⚠ Warning ⚠

To reduce the risk of electric shock:

- ALWAYS unplug the PondAir compressor from the power source before installing, removing or servicing the PondAir components.

IMPORTANT: Airmax®, Inc. is not responsible for equipment damage or failure, losses, injury or death resulting from failure to follow safety precautions, misuse or abuse of equipment.

INSTALLATION INSTRUCTIONS



See Video Instructions of the
PondAir 2 or 4 Diaphragm installation online at
crystalclearpond.com/pondairdiaphragm

Tools Required: #2 Phillips Screwdriver

Step 1

REMOVE the 4 rubber caps from the base of the PondAir™ compressor, to expose the case screws.



Step 2

REMOVE the 4 case screws using a #2 Phillips Screwdriver. Gently separate the upper and lower casing, taking care not to damage any wires.




Step 3

REMOVE the 2 screws securing one of the diaphragm retaining brackets and set aside.



Step 4

REMOVE the mounting screw at the rear of the diaphragm assembly.

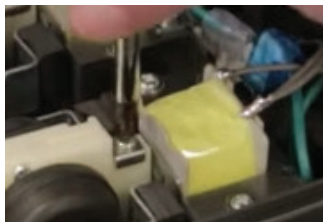


Step 5

LIFT gently on the diaphragm assembly to pull it from the case and disconnect the 2 airlines.



Step 6

REMOVE the rear silver retaining clip from the old diaphragm assembly and reinstall on the new assembly. **Note:** There is no designated top or bottom to the assembly, so choose one side.

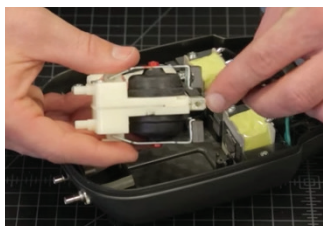


Step 7

RECONNECT the compressor airlines and set the diaphragm assembly back into the lower casing.



Step 8


INSTALL the retaining screw at the rear of the diaphragm assembly.

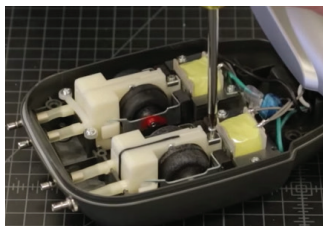

INSTALLATION INSTRUCTIONS *Continued*


Step 9

INSTALL the diaphragm retaining bracket and screws at the front of the assembly.

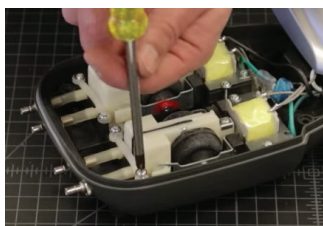

Step 10

REPEAT steps 2 through 9 for the other diaphragm on PondAir™ 4 units.

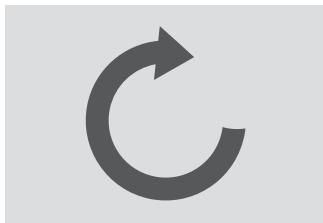

Step 11

REATTACH and secure the upper and lower casing using the 4 case screws, then replace the 4 rubber caps protecting the case screws.



Step 12

CHECK the air intake located underneath the compressor for debris, and then plug in the compressor to check the airflow.



MAINTENANCE

We recommend replacing the diaphragm every 6-12 months.

Airmax® , Inc.
P.O. Box 38
Romeo, MI 48065
866-424-7629
www.crystalclearpond.com

V2